

# Remote Control G1-C and C4

## ATTENTION! Always do copy new code before use

The remote control can accept up to four codes in the four buttons once in programming mode. **PLEASE NOTE:** If a new code is stored in a button, then the previous code is **deleted!**

To enter copy mode:

1. Press at the same time A+B until LED flashes 3 times
2. Release ONLY button **B** and then press button B 3 times. LED should flash. Release all buttons.
3. Press and hold the button to which you want to copy code to.
4. The LED is off. Touch the original remote on the back of G1-C and press the button of the old remote to send the code.
5. When LED of the G1-C stays lit permanently then the copy process is completed successfully. Release all buttons now.
6. You may copy another button following steps 3, 4 and 5. Otherwise copying is finished.
7. Buttons that had no new code will not operate when pressed